

Key Function Of Filling Station

- Provide an accurate method to fill 722.9 after service has been performed that will still be time and cost effective



Unit Operation

Preliminary Instructions

- Raise vehicle and remove drain plug
- Use caution as some fluid will spill, the converter drains back with engine shut off
- Using special tool no. 722-589-03-15-00 remove plastic pipe
 - if replacing transmission discard old fluid
 - if servicing transmission save and measure fluid content for refill
- Remove six aluminum torque to yield screws part no. A 004-990-35-12 and discard, New screws must be used!
- Remove pan inspect and clean
- Replace plastic overflow pipe onto pan
- Install pan using six new aluminum torque to yield screws
- Torque to 4nm. + 180° (See WIS)

Unit Operation

Preliminary Instructions


- Screw adapter interface fitting part no. ??? into pan drain / fill port
- Attach Y - valve and manifold to interface adapter (valve handle in horizontal position)



Unit Operation

Preliminary Instructions

- Check fluid level in fresh fluid tank
there is a sight glass in lower cabinet rear
- Add new 722.9 fluid as necessary
30 liter max capacity
(replace cap on fresh fluid tank)

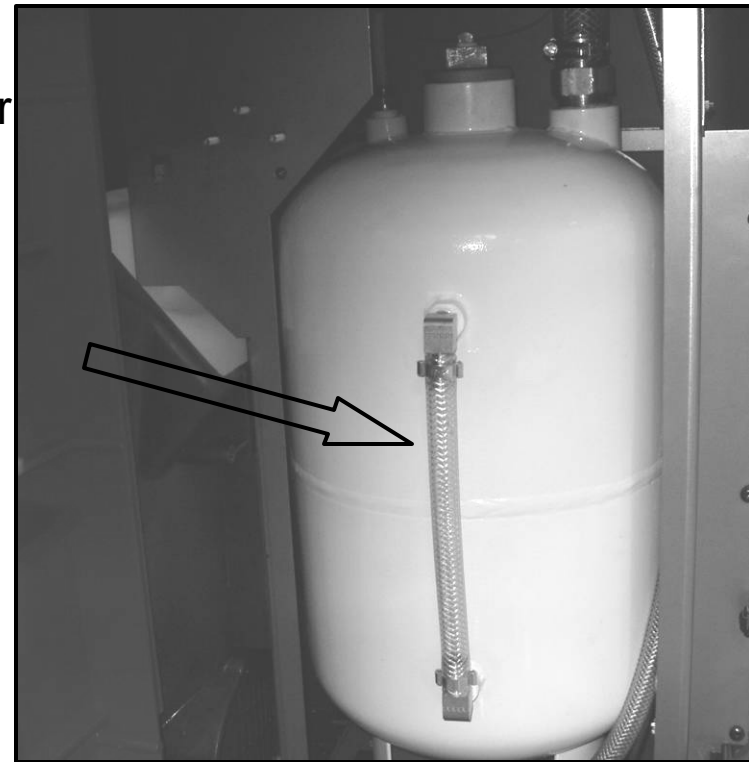

Unit Operation

Preliminary Instructions



Connect unit to shop air supply - (no min. max. spec at present)